




 **FERNO[®] MORTUARY**

SOLUTIONS GUIDE ANZ



©Ferno Australia 2024

All rights reserved. Every care has been taken by a team of people to prevent human and mechanical errors and anomalies in publishing this catalogue. However, Murphy's Law may prevail.

Products depicted in images and product specifications are subject to change in line with material availability, component updates and/or legislative requirements and Standards.

General specifications are rounded. Metric conversions are calculated before rounding. Ferno reserves the right to change specifications without notice.

First Call Stretchers

Powered Stretchers	2
Manual Stretchers	4
Scoop Stretchers	7
Stretcher Accessories & Locks	8

Preparation

Body Lifters & Transfer Devices	10
Covers	12
Ready Reference: Covers	13
Operating Tables	14
Dressing Tables	16

Funeral

Church Trucks	17
Ready Reference: Church Trucks	19
Roller Assemblies & Bier Pins	20
Cemetery Lowering Devices	21

Powered Stretchers

iNjX Powered Stretcher FWEINX

The iNjX Integrated Patient Transport & Loading System is designed to enhance operator safety by effectively eliminating lifting. Now you can lift, lower, load and unload with the push of a button, taking the strain off your backs.



- **Dual, powered actuators** maximises tip stability and lifts loads up to 318 kg
- **Simple one-touch operation** helps you stay focused on the task at hand
- **Telescoping load frame** maximises manoeuvrability in tight spaces
- **Sealed memory foam mattress**
- **AS/NZS 4535 compliant** when the iNjX is fastened with the iNjLINE fastening system
- **Integrated Charging System** eliminates the need for battery management. Auto-shut off when the iNjX is docked prevents accidental operation in-vehicle
- **Integrated Loading System** enables you to stop lifting and to load and unload at the push of a button.

Specifications

Length - minimum / maximum	1600 mm / 2057 mm
Weight - without mattress and restraints	92 kg
Load Capacity	318 kg unassisted lift
Power	36 V



iNjLINE Fastening System ILFS-AUS


The iNjLINE Fastening System meets and exceeds worldwide standards including AS/NZS 4535:1999.

Available in varying lengths to suit differing vehicle sizes, the iNjLINE Fastening System glides the iNjX into position when loading and unloading. Its design allows for extreme loading and unloading approach angles. The Integrated Charging System charges the iNjX battery while the stretcher is locked in position. A single-press button unlocks the iNjX for unloading.

SX Surface Xtender FWESX

The SX Surface Xtender increases the width of the stretcher surface to accommodate larger body shapes.

It features five adjustable locked positions plus an unlocked, lowered position that allows the SX to be positioned out of the way for transfer of the deceased and does not interfere with loading and unloading. Injection moulded with smooth, clean lines for easy cleaning.

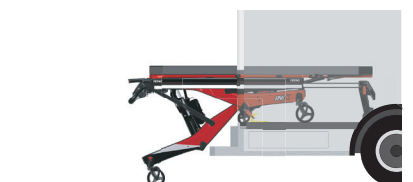

VIPER Powered Stretcher and Loading System FUK3000239

The Ferno Viper is a battery-powered stretcher with a load capacity of 320 kg and adjustable load height up to 95 cm. The Viper Loading System (VLS) is designed to allow the stretcher to be loaded into the ambulance under a variety of conditions — even when parked on uneven surfaces, slopes and pavements.



VIPER FEATURES

- Intuitive operation with two command buttons to raise and lower the stretcher
- Simplicity of use combined with uncomplicated loading and unloading procedures allows for faster training
- Easy to manoeuvre with 150 mm diameter rubberised wheels and single-pedal steer-lock command to switch between directional and swivel wheel function
- Supplied with SX surface extenders

VIPER LOADING SYSTEM FEATURES

- Lightweight and reliable loading and fastening system that installs easily direct to the vehicle floor
- Mechanical design without electronics allows for simple maintenance
- Simple to use, easy to retract and extend the loading carriage
- Fully integrated battery and charging system with automatic on-board charging when the Viper is docked and locked in. The system utilises new generation battery technology.


Specifications

VIPER Length - min / max	1630 mm / 2000 mm
VIPER Width - stretcher / with SX extended	600 mm / 950 mm
VIPER Weight - Stretcher only with battery	75 kg
VIPER Maximum Load Capacity	320 kg
VLS Dimensions - Length / Width / Height	L 2000 / W 570 / H 260 mm
VLS Weight	69 kg
VLS Maximum Load Capacity	400 kg
VLS Maximum Loading Height	960 mm
Viper & VLS Ingress Protection Rating	IP66
Compliance	AS/NZS 4535:1999

General specifications are rounded. Metric conversions are calculated before rounding. Ferno reserves the right to change specifications without notice.

VERSATILE LOADING & UNLOADING

The Viper Loading System provides guided assistance during loading and unloading which means it is not critical for vehicles to be parked on a completely level surface. This also means the Viper stretcher can be loaded and unloaded from a sideways angle if required.

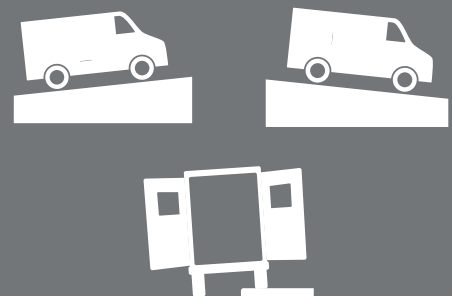

Drop Leg Stretchers



24-MiniMAXX® Mortuary Stretcher

The 24-MiniMAXX has all the innovative features of the 24-MAXX in a narrower package. Able to handle large bodies with ease, the narrow bed surface provides increased manoeuvrability and allows two stretchers to be placed side-by-side in the rear of most vehicles. The 24-MiniMAXX is supplied complete with a 3 cm mattress and two seven-foot, two-piece restraints and is compatible with most Ferno covers and pouches.

KEY FEATURES

- True independent legs with multi-level adjustment
- Load capacity of 454 kg
- Six-inch wheels
- Dual hand controls
- Distinguished durable gloss-black powder-coated finish
- A high-leg version is available for high-floor vehicles

OPTIONAL ACCESSORIES

- Optional Rolling Wheel Kit (0800555)
- Pair of Side-Lift Handles (0821998)
- Pair of Sidearms (0821997)
- Replacement Mattress (0314042)
- Covers — refer pages 10, 11

Specifications

	24-MiniMAXX	24H-MiniMAXX
Product Code	FWE24MI	0032504 FWM24MIH (24H with sidearms)
Length	193 cm	193 cm
Width	60 cm	60 cm
Height — Min / Max	35 cm / 100 cm	
Weight	34 kg	34 kg
Loading Height	66 cm	81 cm
Load Capacity	454 kg	454 kg

General specifications are rounded. Metric conversions are calculated before rounding. Ferno reserves the right to change specifications without notice.



Side-Lift Handles (Pair)



Sidearms



24-MAXX® Mortuary Stretcher

The 24-MAXX allows you to transport bodies weighing up to 454 kg while reducing the risk of back injuries. The stretcher allows easy manoeuvrability in tight spaces and down stairs, and has a powder-coated frame and stylish design. With a variety of innovative features, the 24-MAXX offers the dependable performance you've come to expect from Ferno, the industry leader.


Supplied complete with a 3 cm mattress and two seven-foot, two-piece restraints.

KEY FEATURES

- Independent leg design with multi-level adjustment
- Load capacity of 454 kg
- Oversized six-inch wheels
- Dual hand controls
- Glossy powder-coated frame in maroon

OPTIONAL ACCESSORIES

- Optional Rolling Wheel Kit (0800555)
- Pair of Side-Lift Handles (0821998)
- Pair of Sidearms (0821997)
- Replacement Mattress (0314042)
- Covers — refer pages 10, 11

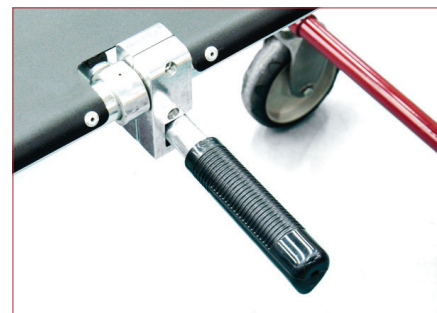

Side-Lift Handles (Pair)



24 Maxx Cover

Specifications	24-MAXX
Product Code	FWM24MAXX
Length	193 cm
Width	66 cm
Height — Min / Max	35 cm / 102 cm
Weight	35 kg
Loading Height	66 cm
Load Capacity	454 kg

General specifications are rounded. Metric conversions are calculated before rounding. Ferno reserves the right to change specifications without notice.

Drop Leg Stretchers



Model 24 Multi-Level Stretcher

The Model 24 Multi-Level stretcher's roll-in style loading enables single person retrieval. Special release levers make it possible to raise and lower the stretcher without assuming the full weight of the Model 24 and the body. The loading-end legs on the Model 24 unfold and lock automatically during unloading operations.

In confined areas, the Model 24 acts as a highly manoeuvrable two-wheeled stretcher when the undercarriage is folded and locked.

KEY FEATURES

- Special release levers to raise and lower effortlessly
- Loading-end legs unfold and lock automatically
- Multi-level feature for easy moving from bed to stretcher
- Can also be used as a portable stretcher
- Slides down stairs with integrated stair guides
- High leg version (FWM24H) is available for higher vehicles

OPTIONAL ACCESSORIES

- Pair of Side-Lift Handles (0821998)
- Sidearms
- Telescoping Handles (LAA-715)
- Replacement Mattress (FWM24M)
- Covers — refer pages 10, 11

Specifications

	Model 24	Model 24H
Product Code	FWM24	FWM24H
Length	196 cm	196 cm
Width	53 cm	53 cm
Height — Min / Max	29 cm / 85 cm	29 cm / 92 cm
Weight	24.5 kg	24.5 kg
Loading Height	65 cm	78cm
Load Capacity	181 kg	181 kg

General specifications are rounded. Metric conversions are calculated before rounding. Ferno reserves the right to change specifications without notice.



Side-Lift Handles (Pair)



Telescoping Handles

Model 11 Stretcher with Wheels FWM11

The Model 11 Stretcher is a simple, flat stretcher featuring a lightweight aluminium frame and a heavy-duty, bacteriostatic, vinyl-coated nylon cover.


- Exclusive slimline centre hinges enable the stretcher to fold for compact storage
- Includes two five-foot quick-release patient restraints.
- For easy handling, the Model 11 can be stored in the Model 385-A Combination Storage and Carrying Case



Model 11-T Stretcher FWM11-T

The Model 11-T is a sturdy and lightweight stretcher incorporating an innovative track system to enable the safe removal down stairs with greater ease and control.

- Two front wheels and narrow track-to-ground clearance enables easy manoeuvring over different types of surfaces, even with the tracks deployed
- The stretcher folds in half when not in use for compact storage.
- Includes two five-foot quick-release restraints and a footrest

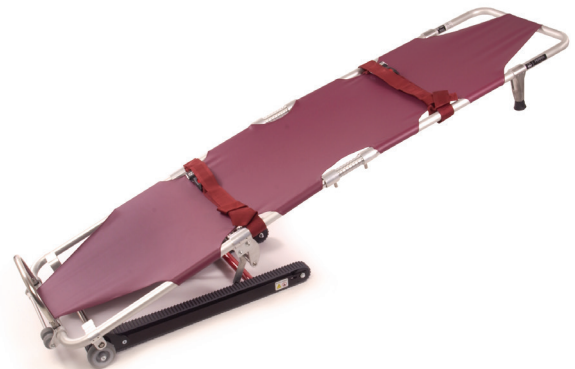

Ferno Scoop EXL™ BSSF-EXL

Hinged, interlocking ends enable the EXL Scoop to be uncoupled on either or both ends and placed under the body without needing to roll the body. The Scoop is closed and locked using a scissor-type closing motion.

- Oval profile and angled handles provide ergonomic lifting and handling
- Narrow foot end frame is convenient for small, tight areas
- Impervious to fluids, easy to clean
- Four adjustable length options, the EXL folds for compact storage and includes three restraints.



Specifications	Model 11	Model 11-T	Ferno Scoop EXL
Product Code	FWM11	FWM11-T	BSSF-EXL
Length - Open / Folded	187 cm / 94 cm	193 cm / 93 cm	163-200 cm (min-max) / 120 cm
Width	47 cm	50 cm	42.5 cm
Height	20 cm	20 cm	7 cm (open) / 8 cm folded
Weight	6 kg	11 kg	8 kg
Load Capacity	159 kg	159 kg	227 kg

General specifications are rounded. Metric conversions are calculated before rounding. Ferno reserves the right to change specifications without notice.

Accessories & Locks

Model 24M Stretcher Mattress FWM24M

Model 24M stretcher mattress is a 2.5 cm thick foam pad covered with vinyl-coated nylon.

- The cover is wear resistant and easy to clean
- Available in burgandy (maroon)
- Fits Model 23, Model 24 and Model 24H stretchers



Model 27 Stretcher Mattress FWM27M

The Model 27 stretcher mattress is a tapered mattress constructed with 3 cm thick foam and covered in vinyl-coated nylon.

- The cover is wear resistant and easy to clean
- Available in burgandy (maroon)
- Fits the Ferno Model 27-1 Multi-Level stretcher.



24-MAXX® & 24-MiniMAXX® Mattresses

These mattresses are constructed with a 3 mm polyurethane foam pad and covered in vinyl-coated nylon. .

- The cover is wear resistant and easy to clean
- Available in black
- 24-MAXX Mattress - 0313998
- 24-MiniMAXX Mattress - 0314042



Mattress Specifications	Model 24M	Model 27	24-MAXX	24-MiniMAXX
Product Code	FWM24M	FWM27M	0313998	0314042
Length	183 cm	183 cm	180 cm	178 cm
Width	46 cm	48 cm	61 cm	55 cm
Thickness	2.5 cm	2.5 cm	3 cm	3 cm
Compatible Stretchers	Model 23 Model 24 Model 24-H	Model 27-1	24-MAXX	24-MiniMAXX

General specifications are rounded. Metric conversions are calculated before rounding. Ferno reserves the right to change specifications without notice.

Model 430 Two Piece Restraints FWE430*

These restraints are made of 2 inch nylon webbing with quick-release, automotive-style metal buckles.

- Chrome-plated buckles resist rust and corrosion
- Push button operation allows secure fastening and easy release
- A Hemmed tab prevents the strap from pulling free of the buckle
- 5-foot Black restraints - BRR-43025
- 7-foot Black restraints - BRR-43027



Ferno 2427 Floor Lock FWMFL

This floor lock is ideal for multi-purpose fleet vehicles or situations where low speed transportation is required. The front rear locking mechanism is attached by steel wing-nuts, allowing removal and fitting by hand to the fixed, low profile base. This allows full access and storage space in the vehicle for other equipment when a stretcher is not required.

The rear locking mechanism uses a simple but effective spring-loaded pistol grip handle that captures the rear of the stretcher but swings low when not in use.

- Designed for quick installation to or removal from a vehicle floor
- Made from heavy-duty steel
- The Ferno 2427 does not meet all aspects of AS/NZS 4535:1999



Model 533 Wheel Cups FWM533

Wheel cups inhibit stretcher movement within a vehicle.

- Polished aluminium wheel cups are available individually
- Available in two sizes - 4" to suit 10, 13 and 18 cm wheels; 7" to fit 61 cm wheelchair wheels
- Model 533, 4-inch Wheel Cups (each) - 0815334
- Model 533, 7-inch Wheel Cups (each) - 0815337



Model 534 and 535 Post Cups

Post cups hold stretcher posts firmly in place on the vehicle floor.

- Sold in pairs, these cups are permanently mounted
- Model 534 Recessed Post Cups (pair) - FWM534
- Model 535 Raised Post Cups (pair) - FWM535



Body Lifters & Transfer Devices

Ferno Transfer Board FWESPS

The Ferno Transfer Board has a smooth top and bottom surface which allows for easy, low-friction gliding to facilitate body transfers.

- Comfortable, convenient and adaptable
- Manufactured from high impact polyurethane
- Six grab slots with rounded, smooth edges



Ferno 341 Carry Sheet FWE341

The Ferno 341 Carry Sheet is a strong yet light in weight sheet for transfer of bodies where speed is important.

- Manufactured from Cordura*
- Head and Foot end handles are exceptionally useful when carrying in confined spaces
- Ten side handles with each pair sewn from one piece of webbing with strategically placed reinforcement for strength and reliability; spaced evenly to distribute weight while carrying
- Webbed perimeter reinforcement provides strength and integrity to the whole device



Retmex Lite Carry Sheet TET-1099602010

Constructed from an ultralight polyamide material, the Retmex Lite Model conveniently packs into an integrated storage bag.

- Ten reinforced carry handles
- Head and foot end handles
- The carry sheet packs into a compact package inside its integrated storage bag



Specifications

	Ferno Transfer Board	Ferno 341 Carry Sheet	Retmex Lite Carry Sheet
Product Code	FWESPS	FWE341	TET-1099602010
Length	970 mm	1660 mm	1880 mm
Width	457 mm	630 mm	690 mm
Working Load Limit	-	159 kg	250 kg
Weight		360 g	500 g

General specifications are rounded. Metric conversions are calculated before rounding. Ferno reserves the right to change specifications without notice.

Body Lifters & Transfer Devices

Body Bag with Handles DPBB-H

These body bags incorporate a zipper on three sides for ease of body handling.

- Constructed from heavy duty PVC
- Eight integral handles on both sides of the bag evenly distributes the carry weight for comfortable handling during transportation
- Bag dimensions: 2080 mm (L) x 900 mm (W)



Ferno Little Lifter Body Lifter FWMBL



The Australian-made Little Lifter is an effective and affordable device designed to reduce the strain of moving a body.

- Light in weight, robust design with manual hydraulic lift
- Easy to clean and maintain
- Highly manoeuvrable with swivel wheels and wheel locks
- Efficient operation

Specifications

Length	900 mm
Length	900 mm
Height	1300 mm
Weight	35 kg
Maximum Load	200 kg
Maximum Height Extension	800 mm

Covers

24-MAXX® First Call Cover

The extra-large 24-MAXX first call cover is specially designed for larger bodies and includes a 30 cm x 35 cm pocket.

- Elasticated slip-over style
- Fits 24-MAXX, 24-MiniMAXX, Model 24 and Model 27-1 Series
- Available in Crypton Aria fabric only. Refer to Ready Reference on page 13 for fabric options.



Model 320 First Call Cover

The slip-over styling is secured by elastic at both ends and is reversible end-to-end.

- Includes 30 cm x 35 cm pocket
- Fits stretchers 193 x 51 cm, Model 24 and Model 27-1 Series stretchers
- Available in Crypton Aria and Suede. Refer to the Ready Reference on page 13 for fabric and colour options.



Model 321 First Call Cover

The Model 321 is a tailored, slip-over cover and reversible end-to-end.

- Includes 30 cm x 35 cm pocket
- Fits stretchers up to 58 cm wide, Model 24 and Model 27-1 Series stretchers
- Available in Crypton Aria and Suede. Refer to Ready Reference on page 13 for fabric and colour options.



Model 325 First Call Cover

Slip-over cover with elastic on one end.

- Fits folding stretchers measuring approximately 188 cm x 53 cm
- Available in Crypton Aria and Suede. Refer to Ready Reference on page 13 for fabric and colour options.








Model 330 First Call Cover

This cover includes tabs that secure the cover from beneath the mattress and incorporates a full length zipper along its top surface. Slots in the cover allow restraint straps to pass through and secure both the body and cover to the stretcher.

- Fits most mortuary and standard stretchers approx 191 cm x 58 cm
- Available in Crypton Aria and Suede. Refer to Ready Reference on page 13 for fabric and colour options.



Ready Reference First Call Covers

	24-MAXX®	Model 320	Model 321	Model 325	Model 330
					
Description	Suits extra large bodies Includes a 30 x 35cm pocket	Slip-over style Reversible end-to-end Includes 30 x 35cm pocket	Slip-over style Reversible end-to-end	Elasticated on one end Includes 30 x 35cm pocket	Snap-fastener tabs to hold cover in place beneath mattress Full length zipper Slots for restraint pass-through Includes 30 x 35cm pocket
Compatible Stretchers	24-MAXX 24-MiniMAXX Model 24 Series Model 27-1 Series	Fits stretchers approx 193 x 51 cm Model 24 Series Model 27-1 Series	Fits stretchers approx 193 x 58 cm Model 23 Series Model 24 Series	Fits folding stretchers approx. 188 x 53 cm	Fits most standard and mortuary stretchers approx 191 x 58 cm
Aria Cabernet	Code: 031-4154CF	Code: 031-4126CF	Code: 031-4130CF	Code: 031-4134CF	Code: 031-4138CF
Aria Blue	N/A	Code: 031-4127CF	Code: 031-4131CF	Code: 031-4135CF	Code: 031-4139CF
Aria Platinum	N/A	Code: 031-4128CF	Code: 031-4132CF	Code: 031-4136CF	Code: 031-4140CF
Aria Black	Code: 031-4155CF	Code: 031-4129CF	Code: 031-4133CF	Code: 031-4137CF	Code: 031-4141CF
Suede Fathom	N/A	Code: 031-4080CF	Code: 031-4086CF	Code: 031-4068CF	Code: 031-4092CF
Suede Burgandy	N/A	Code: 031-4081CF	Code: 031-4087CF	Code: 031-4069CF	Code: 031-4093CF
Suede Caviar	N/A	Code: 031-4082CF	Code: 031-4088CF	Code: 031-4070CF	Code: 031-4094CF
Crypton® Fabrics	Ferno covers are made with patented Crypton Aria and Suede. Every fibre is encapsulated with a stain, odour and bacteria-resistant barrier. The breathable moisture barrier is permanently integrated into the fabric, ensuring a complete and proven performance system from the fibres up. The Aria and Suede may be spot-cleaned or machine washed when excessively soiled.				

NOTE: Minimum order quantities may apply to certain colours which are set by the manufacturing entity. Refer to the Price List for details.



Operating Tables

Model 101-H Hydraulic Operating Table FWM101H



Foot pedals provide quick height and angle adjustments



Four 20cm wheels lock instantly with a single foot pedal

The Model 101-H is purpose-built to suit mortuary needs and manufactured from quality material including a solid work surface of type 304 stainless steel with a #3 finish to ensure longevity of use.

- Solid surface eliminates crevices where liquids can accumulate
- The convex table top drains fluids away from the body while the extra-deep perimeter trough reduces the need for splash guards
- A drain at the foot end of the table quickly eliminates fluids from the table
- Wheels lock instantly with a single foot pedal
- Side extension panels (sold separately) are available in single units or as a kit

Specifications

NSN	9930-00-164-0648	
Length / Width	205 cm / 77 cm	
Height - maximum	103 cm	
Height - minimum	72 cm	
Wheelbase	123 cm x 62 cm	
Table Weight	72 kg	
Load Capacity	272 kg	
Optional Accessories	FWM-0695796	Side Extension Panels (each)
	FWM-0695797	Side Extension Storage Bracket
	FWM-000SEPKIT	Side Extension Panel Kit

General specifications are rounded. Metric conversions are calculated before rounding. Ferno reserves the right to change specifications without notice.



Multiple surface height and angle adjustments makes for easier preparation while either a standing or sitting




Model 101-H with side extension panels fitted

Model 102 Folding Operating Table



Drain hole in centre of table foot end

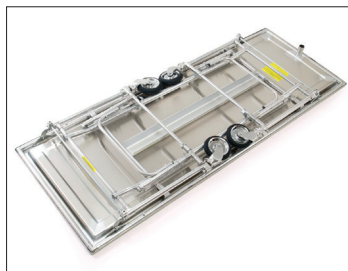

Model 102 folds for storage

The Model 102 is a multi-purpose table ideal for embalming, dressing and transferring that conveniently folds away for compact storage.

- Stainless steel table convex top with drainage trough around the perimeter to drain fluids away from the body
- Exclusive one-hand release mechanism easily adjusts either end of the table from 83cm to 98cm independently
- Tubular aluminium frame with 15 cm lockable swivel wheels
- Folds for storage and can stand on its end to store behind doors or a closet

Model 103 Combination Table



The Model 103 Combination Operating Table is a multi-purpose table used for embalming, transferring and dressing.

- Stainless steel top is durable and rigid
- The convex table top and deep side troughs to facilitate efficient drainage away from the body
- A drain is centrally located at the foot end of the table
- 15 cm wheels can be locked to keep the table stationary while in use.

Specifications

	Model 102 FWM102	Model 103 FWM103
Length / Width	205 cm / 77 cm	205 cm / 77 cm
Height - Maximum / Minimum	98 cm / 83 cm	95 cm / 80 cm
Wheelbase	163 cm x 69 cm	136 cm x 69 cm
Table Weight	39.5 kg	36 kg
Load Capacity	454 kg	454 kg
Optional Accessories	FWM-0695796	Side Extension Panels (each)
	FWM-0695797	Side Extension Storage Bracket
	FWM-000SEPKIT	Side Extension Panel Kit

General specifications are rounded. Metric conversions are calculated before rounding. Ferno reserves the right to change specifications without notice.

Dressing Tables

Model 34 Folding Dressing Table

The Model 34 Dressing Table quickly unfolds for use and stores compactly when not required.

- Two-piece, laminated grey top resists scratches and stains
- Cleans very quickly
- Four 15 cm wheels swivel for easier manoeuvring in tight spaces and remains stationary when wheel locks are engaged
- Height adjusts independently on both ends of the table
- Available in two widths - regular and wide
- FWM34 - Grey Regular
- FWM34W - Grey Wide



Model 36 Dressing Table

Similar to the Model 34, the Model 36 Dressing Table features an exclusive, one-hand release to enable quick adjustment of table height from 81 cm to 96 cm.

- Laminated grey top resists scratches and stains
- Cleans very quickly
- Four 15 cm wheels swivel for easier manoeuvring in tight spaces and remains stationary when wheel locks are engaged
- Height adjusts independently on both ends of the table.



Specifications

Specifications	Model 34 Regular	Model 34 Wide	Model 36
Code	FWM34	FWM34W	FWM36G
Colour	Grey	Grey	Grey
Length - Open	196 cm	196 cm	196 cm
Length - Folded	150 cm	150 cm	N/A
Width	62 cm	73.5 cm	62 cm
Height - Maximum / Minimum	98 cm / 83 cm	98 cm / 83 cm	95 cm / 80 cm
Wheelbase	163 cm x 69 cm	163 cm x 69 cm	136 cm x 69 cm
Table Weight	39.5 kg	40 kg	36 kg
Load Capacity	454 kg	454 kg	454 kg

General specifications are rounded. Metric conversions are calculated before rounding. Ferno reserves the right to change specifications without notice.

Cemetery and Church Truck FWM87HCCT



The Ferno Cemetery and Church Truck is our most versatile and sought after model. Constructed from strong yet lightweight aluminium tubing, the truck frame is given an additional clear gloss-anodised finish for durable good looks and easy cleaning.

The combination of useful and ergonomic features, durable wheels, quality materials and superior craftsmanship will ensure the Cemetery and Church Truck remains a beautiful and functional piece of equipment for generations.

- Four locking lengths to accommodate a range of casket sizes
- Stable X-frame undercarriage and rubber bumpers prevents unwanted casket movement
- Large 20 cm pneumatic wheels with aggressive tread provide grip to roll easily over grass, gravel and uneven terrain
- Wheels swivel for greater manoeuvrability in tight spaces
- When the casket is removed, a special built-in centre handle allows the truck to be pushed, pulled or carried
- Four side lift handles enable the truck to be lifted over kerbs, and fold down discreetly when not in use
- Available in silver, bronze, gold or onyx
- To compare full specifications with other models, refer to the Church Trucks Ready Reference, page 19



Folds into a compact unit



Four lockable lengths to cater for different caskets

Specifications

Load Capacity	454 kg
Length - Minimum / Maximum	49 cm / 156 cm
Folded Dimensions (L x H x W)	17 cm x 83 cm x 46 cm
Weight	27 kg

Church Trucks

Model 87 Church Truck

The Model 87 Church Truck is made of strong, rectangular aluminium tubing that is given a protective gloss anodised finish which helps protect the frame while making it easier to wipe clean.


- Four locking lengths to accommodate a range of casket sizes
- Stable X-frame undercarriage and rubber bumpers prevents unwanted casket movement
- 15 cm wheels roll quietly and easily over carpet and sills
- Wheels swivel for greater manoeuvrability in tight spaces
- When the casket is removed, a special built-in centre handle allows the truck to be pushed, pulled or carried
- A handled model includes four side lift handles to allow the truck to be lifted over kerbs, and fold down discreetly when not in use
- Available in silver, bronze, gold or onyx
- To compare full specifications with other models, refer to the Church Trucks Ready Reference, page 19









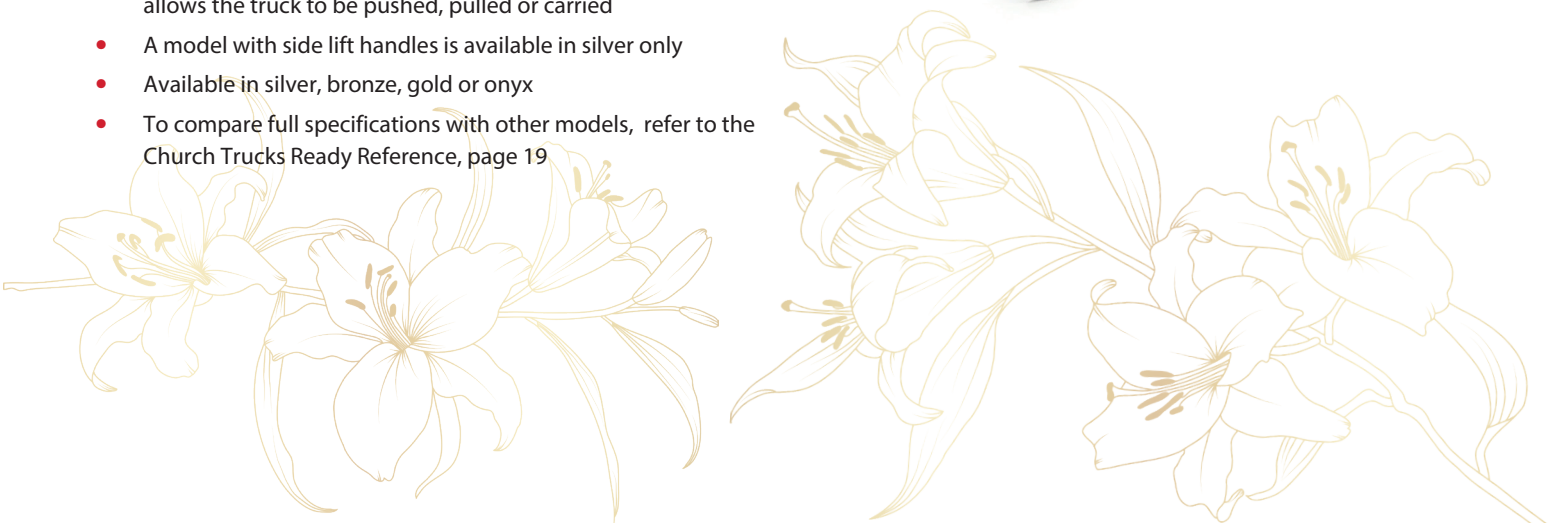


Model 88 Church Truck

The Model 88 Church Truck is designed for those preferring a more compact truck. Constructed from the same materials as the Model 87, the Model 88 boasts the same quality of craftsmanship and thoughtful features in a smaller frame.

- Four locking lengths to accommodate a range of casket sizes
- Stable X-frame undercarriage and rubber bumpers prevents unwanted casket movement
- 15 cm wheels roll quietly and easily over carpet and sills
- Wheels swivel for greater manoeuvrability in tight spaces
- When the casket is removed, a special built-in centre handle allows the truck to be pushed, pulled or carried
- A model with side lift handles is available in silver only
- Available in silver, bronze, gold or onyx
- To compare full specifications with other models, refer to the Church Trucks Ready Reference, page 19



Ready Reference Church Trucks

	Cemetery and Church Truck	Model 87 Church Truck	Model 87 with Handles	Model 88 Church Truck
				
Description	Four swivel, extra large pneumatic wheels for outdoor terrain. Central handle for manoeuvring when not loaded. Four side lift handles to aid lifting over curbs. Not compatible with drape frames or drapes.	Four swivel 15 cm wheels roll easily over carpet, sills and small obstacles. Central handle for manoeuvring when not loaded. Side lift handles not supplied.	Four swivel 15 cm wheels roll easily over carpet, sills and small obstacles. Central handle for manoeuvring when not loaded. Side lift handles included.	Compact model. Four swivel 15 cm wheels roll easily over carpet, sills and small obstacles. Central handle for manoeuvring when not loaded. Model 88 with side lift handles also available.
Length: Folded	17 cm	16 cm	16 cm	16 cm
1st Position	49 cm	50 cm	50 cm	41 cm
2nd Position	75 cm	77 cm	77 cm	60 cm
3rd Position	128 cm	127 cm	127 cm	97 cm
Fully Extended	156 cm	155 cm	155 cm	118 cm
Height: Folded/ Fully Extended	83 cm / 64 cm	74 cm / 56 cm	74 cm / 56 cm	74 cm / 56 cm
Width	46 cm	46 cm	46 cm	46 cm
Wheel Size	20 cm	15 cm	15 cm	15 cm
Weight	27 kg	16 kg	16 kg	14 kg
Max. Load	454 kg	454 kg	454 kg	454 kg
	Silver: FWM87HCCT Standard Stock	Silver: FWM87 Ordered on Demand	Silver: FWM87H Standard Stock	Silver: FWM88 Ordered on Demand Silver: FWM88H w/ Handles Standard Stock
	Bronze: FWM87HBGCCT Ordered on Demand	Bronze: (618861) Ordered on Demand	Bronze: FWM87HB Ordered on Demand	Bronze: FWM88-B Ordered on Demand
	Gold: (618885) Ordered on Demand	Gold: FWM87G Ordered on Demand	Gold: FWM87HG Ordered on Demand	Gold: FWM88G Ordered on Demand
	N/A	Blue-Grey: FWM87BG Ordered on Demand	Blue-Grey: FWM87BGH Ordered on Demand	Blue-Grey: FWM88BG Ordered on Demand
	Onyx: (87-HOCCT) Ordered on Demand	Onyx: (618864) Ordered on Demand	Onyx: FWM87HO Ordered on Demand	Onyx: FWM88O Ordered on Demand

Roller Assemblies & Bier Pins

Model 124 Adjustable Casket Table

The Model 124 Adjustable Casket Table adjusts to fit a variety of vehicle sizes.

By placing bier pins in the appropriate holes, the table length can be shortened or extended to accommodate infant to adult sized caskets. Bier pins sold separately.



Specifications	Code	Max. Length x Width x Height	Weight	Load Capacity
Model 124 Adjustable Casket Table	FWM124	237 cm x 71 cm x 5 cm	12.7 kg	454 kg

Tailgate Roller Assemblies

Tailgate Rollers are available as a single or dual roller assembly.


Specifications	Single Roller Assembly	Dual Roller Assembly
Product Code	FMW573	FMW574
Dimensions	34 cm x 10 cm x 5 cm	60 cm x 10 cm x 5 cm



Model 156 Roller System Parts



Bier Pin Storage Plate
FWM575

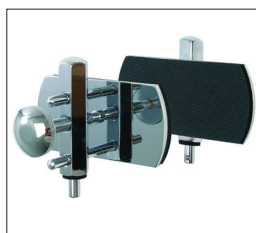

576 Complete Bier Pin Set
FWM576



Adjustable Bier Pin Set
FWM577A



Stationary Bier Pin Set
FWM577S

Cemetery Lowering Devices

Frigid

Like Ferno, the Frigid Fluid Company is a family-owned and operated company. Established in 1892, Frigid is in its 5th generation of ownership by the same family who maintain the company's fine reputation by focusing on innovation and quality manufacturing standards.

The Frigid products curated in this guide have proven to be the most popular in our region.

Imperial Cemetery Casket Lowering Device F-3-IMP55025K

The Imperial Cemetery model is highly favoured as an enduring, dependable and affordable casket lowering device.

On the Cemetery model, the long rails telescope lengthwise but they do not fold or collapse. The rails are removable by means of four threaded studs but the intention of the design is that the rails stay attached at all times. For this reason, a 2-person setup is recommended.

The corner heads contain sealed, self-lubricating steel ball bearings throughout, and high quality customised precision gearing made of tempered steel and bronze.

The operating heart of each unit is Frigid's handcrafted governor and governor brake assembly which works to maintain a smooth lowering speed.

- Sturdy, cast aluminium corner housings and ISO-9001 certified stainless steel tubing polished to a mirror finish
- High quality tempered steel and bronze precision gearing
- Hand-made speed control components maintain a smooth, quiet and controlled lowering speed
- Stainless steel brake lever for simple lowering release

- Resists corrosion and maintains appearance
- Modular design for compact storage and transportation
- Assembled size: 147 cm L x 55.8 cm W x 19 cm H
- Extended (inside dim.): 233.7 cm L x 86.4 cm W x 19 cm H
- Weight: Imperial Cemetery unit - 40.82 kg
- Weight: Imperial Cemetery with Placer Set installed - 61.2 kg
- Maximum load: 362.8 kg




Imperial Placer Set complete with Extended Rollers F-3-IMP55025PX

The Placer Set (inset and pictured installed on the Imperial lowering device) includes longer Placer arms that provide extra support and better suited to caskets in our region. Supplied components include:

- Two support bushing placer arms complete
- Two connecting bushing placer arms complete
- One end stop assembly complete
- One end roller complete
- Two placer guide rods
- One set of end roller shims
- Optional Ratchet Gear Covers are an excellent investment to protect exposed gear assemblies when the Placer Set is dismantled for transport or storage. Sold singly. Code: F-4-PLC01



Ratchet Gear Cover
F-4-PLC01

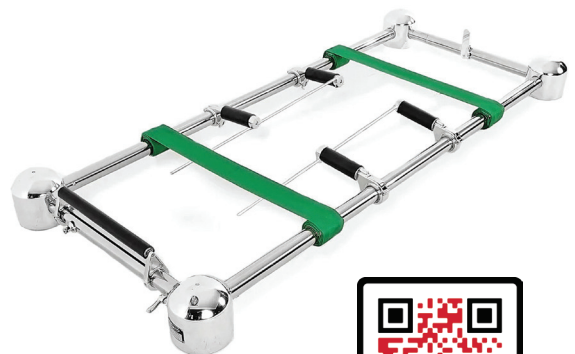

Scan the QR code to see how
the Placer Set is installed



Cemetery Lowering Devices

Telescoping Lowering Device Stand F-3-STD10075

The Telescoping Stand provides a sturdy base for the display of your casket lowering device during service. Unlike the original Regular stand, the telescoping model is fully adjustable for hillside setup.

Corner posts and made from polished stainless steel tubing while all other support tubing is crafted from polished aluminium to reduce weight.

- One end of the telescoping stand adjusts from 25.4 cm to 45.8 cm while the other end adjusts from 35.6 cm to 66 cm.
- Weight: 43 kg



Scan the QR code to watch Stand and Lowering Device setup and dismantle



Telescoping Stand Drapes Double-Sided

Twice the thickness of single-faced drapes,, the plush side of the material is visible both on the outside and inside of the drape.

The double-faced drapes for telescoping stands are equipped with an internal belt mechanism which allows them to be tapered to conform to the slope of a hillside setup.

- Green 4 piece - F-5-DRP1071
- Blue 4 piece - F-5-DRP1071BL
- Burgandy 4 piece - F-5-DRP1071BUR



Domed Device Head Covers



Keep your lowering device looking like new!

The sturdy black plastic covers are dome-shaped to fit securely over the Imperial Lowering Device corner heads to protect against scratches and wear.

- Sold in sets of four, black only
- Code: F-3-COVERHEAD-IMP

Crank Handle Lowering Device



The cast stainless steel crank handle has been updated to provide improved ergonomics, higher handle height and strength.

The redesigned handle eliminates the potential to bend and scratch the top of the head cap.

- Cast Stainless Steel construction
- Code: F-4-HTB100

End Roller Complete



Help to roll caskets safely on to your casket lowering device with the End Roller Complete.

- Code: F-3-ERP8
- End Roller Clamp Shims (F-4-ERS) are sold separately



EMERGENCY
RESCUE
SAFETY
MORTUARY
EQUIPMENT SERVICE



NEW ZEALAND

Tel: +64 4 928 3099

0800 966 946

E: sales.nz@ferno.com

W: www.ferno.co.nz

AUSTRALIA HEAD OFFICE

11 Johnstone Road

BRENDALE QUEENSLAND 4500

Tel: +61 7 3881 4999

Fax: +61 7 3881 1125

